



Assembly Instruction

ITEM NO: 1218F1S/TL/DG/RN-1

ACCENT CHAIR


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

PARTS LIST


NO.	DRAWING	QTY	DESCRIPTION
A	A line drawing of a rectangular chair seat with four circular buttons arranged in a 2x2 grid in the center.	1	SEAT
B	A line drawing of a rectangular seat cushion with rounded corners.	1	SEAT CUSHION
C	A line drawing of a single wooden front leg, which is tapered and flared at the bottom.	2	WOODEN FRONT LEG
D	A line drawing of a single wooden rear leg, which is tapered and flared at the bottom, similar to the front legs but with a different profile.	2	WOODEN REAR LEG
E	A line drawing of a single metal washer.	4	WASHER

Please follow the drawings below to assemble the item.


Step 1. Legs are stored in the non-woven bag at the bottom of the chair, please take out for assembly.

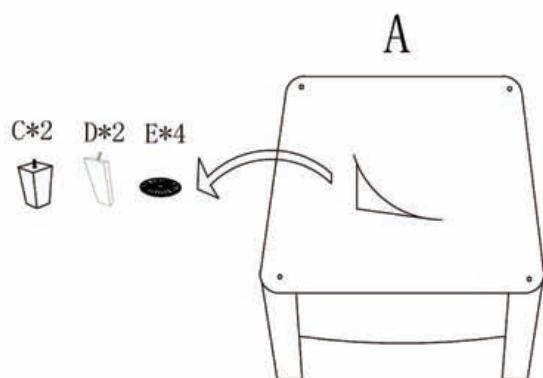

Step 2. Insert the washer onto the top of legs, rotate the legs to tighten it. Rear leg curves must face outward.

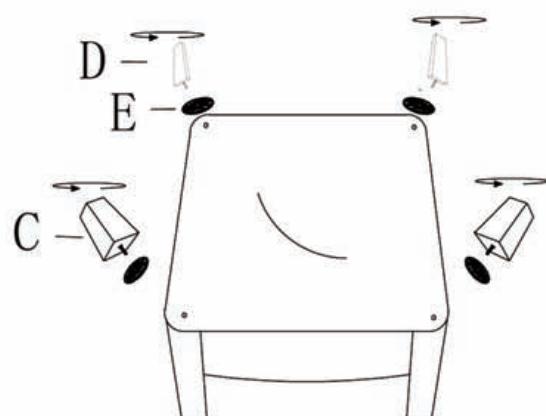

Step 3.

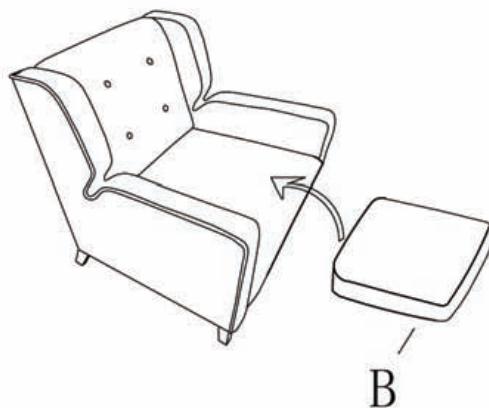

Step 4.



CARE INSTRUCTION FOR 100% POLYESTER FURNITURE:

In order to maintain the original appearance of your 100% polyester furniture, please follow below care procedures:

● Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage 100% polyester.

● Wipe gently with a damp soft cloth to remove dust, dirt and any grime buildup.

● Wipe the 100% polyester with professional cleanser.

For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.

