


 



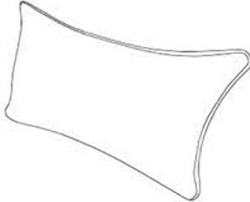
Assembly Instruction

ITEM NO. 1296F3S

ACCENT CHAIR


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

PARTS LIST:

| NO. | DESCRIPTION | PHOTO | QTY |
|-----|------------------|--|------|
| A | CHAIR |  | 1pc |
| B | WOODEN FRONT LEG |  | 2pcs |
| C | WOODEN REAR LEG |  | 2pcs |
| D | WASHER |  | 4pcs |
| E | SEAT CUSHION |  | 1pc |
| F | PILLOW |  | 1pc |

Please follow the drawings below to assemble the item.

Step 1: Wooden legs are packed in bubble bag and stored in the bottom of the chair, please take out for assembly.

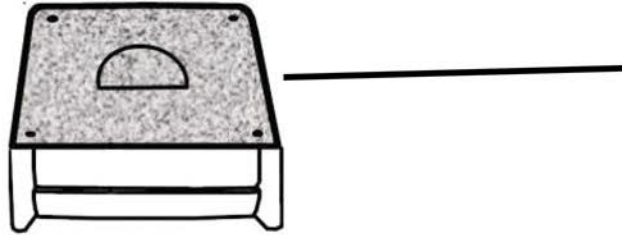



B WOODEN FRONT LEG  X 2

C WOODEN REAR LEG  X 2


D WASHER  X4

Step 2: Insert the washer onto the top of the Legs, Rotate the legs to tighten it. Rear leg Curves must face outward.

Step 3: Put seat cushion and pillow on the seat.

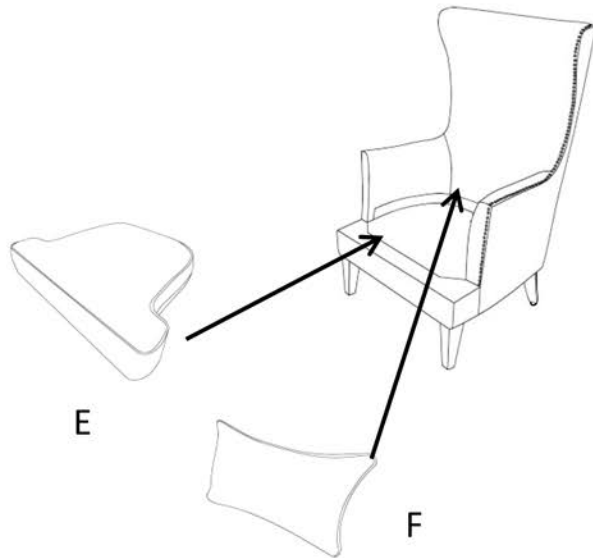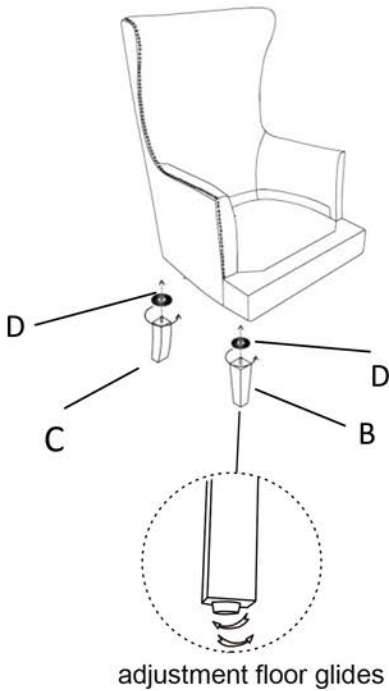


Step 4: Completed

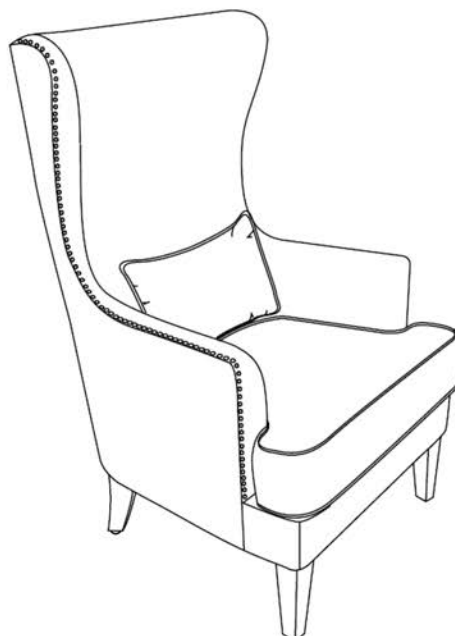

CARE INSTRUCTION FOR 100% POLYESTER FURNITURE:

In order to maintain the original appearance of your 100% polyester furniture, please follow below care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage 100% polyester.
 - Wipe gently with a damp soft cloth to remove dust, dirt and any grime buildup.
 - Wipe the 100% polyester with professional cleanser.
-  For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.