

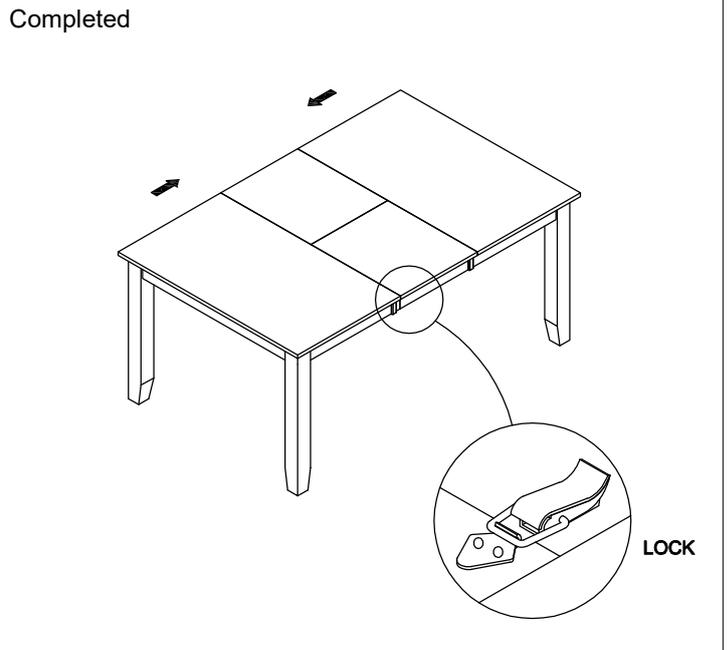
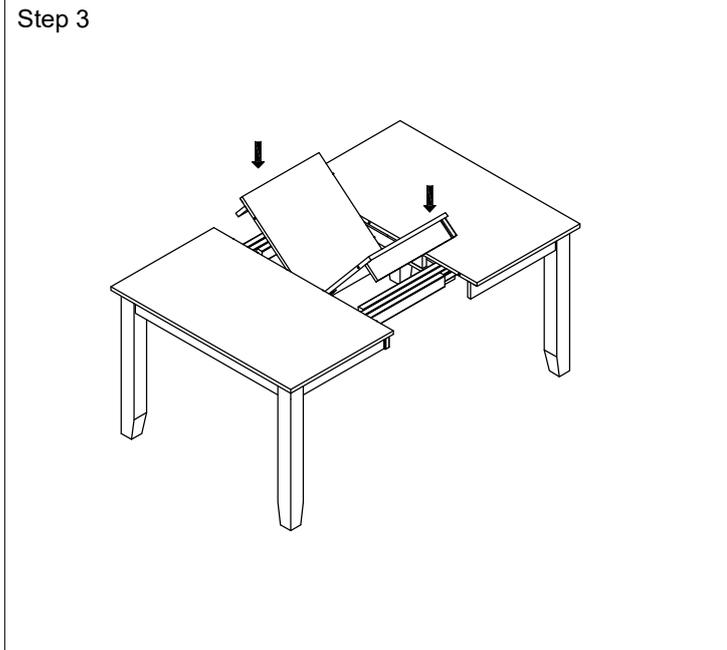


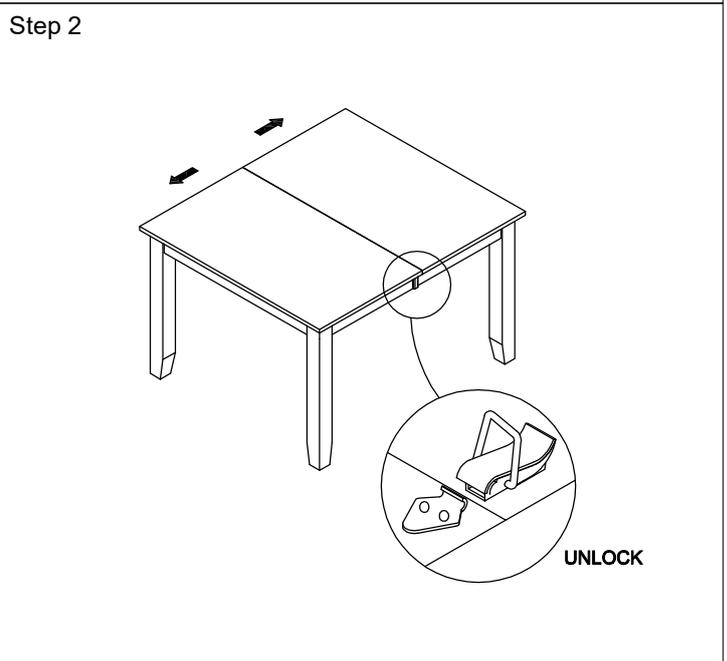

ASSEMBLY INSTRUCTION

ITEM NO.: 5567GY-72 DINING TABLE

| PART LIST | | | | HARDWARE LIST | | | |
|-----------|-----------|---|------|---------------|--|----------------------|------|
| 1 | Table Top |  | 1pc | A |  | Bolt Ø5/16" x 3"L | 8pcs |
| 2 | Table Leg |  | 4pcs | B |  | Lock Washer (Ø5/16") | 8pcs |
| | | | | C |  | Flat Washer (Ø5/16") | 8pcs |
| | | | | D |  | Allen Key (4mm) | 1pc |

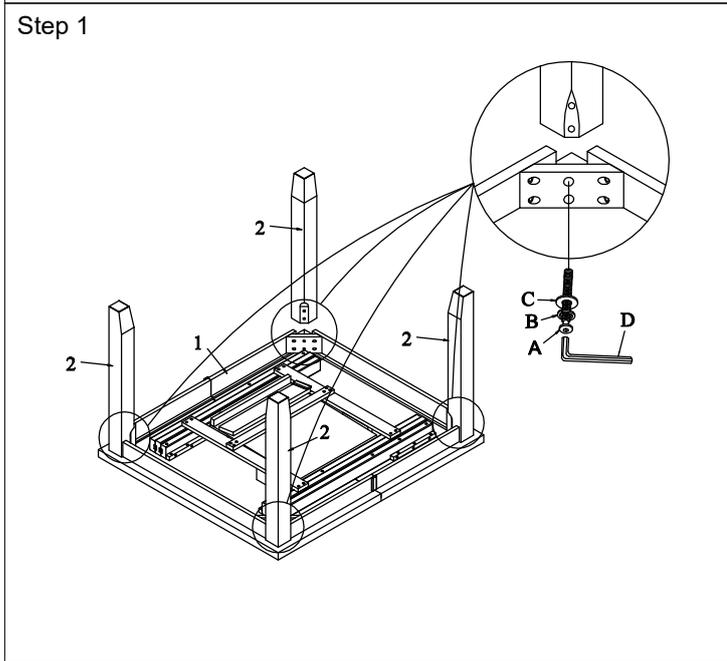

For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.