



Assembly Instruction CLICK CLACK SOFA

**ITEM NO : 9833BR - 3CL Click Clack Sofa,
Brown 100% Polyester
9833GY - 3CL Click Clack Sofa,
Gray 100% Polyester**


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

COMPONENT LIST (CLICK CLACK SOFA)


NO	DESCRIPTION	DRAWING	QTY	NO	DESCRIPTION	DRAWING	QTY
A	LSF SEAT		1 PC	F	LOCK WASHER		12 PCS
B	RSF SEAT		1 PC	G	FLAT WASHER		12 PCS
C	WOODEN LEG		4 PCS	H	NUT		6 PCS
D	WOODEN SUPPORT LEG		2 PCS	I	ALLEN KEY		1 PC
E	BOLT Ø5/16 * 75mm		6 PCS	J	WRENCH		1 PC


Step #1

Legs and hardware are stored in the bottom of the seat, please take out for assembly.

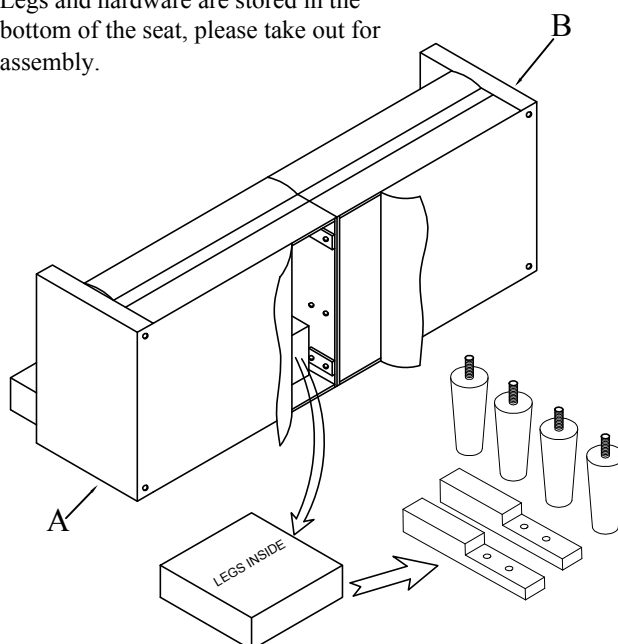

Step #2

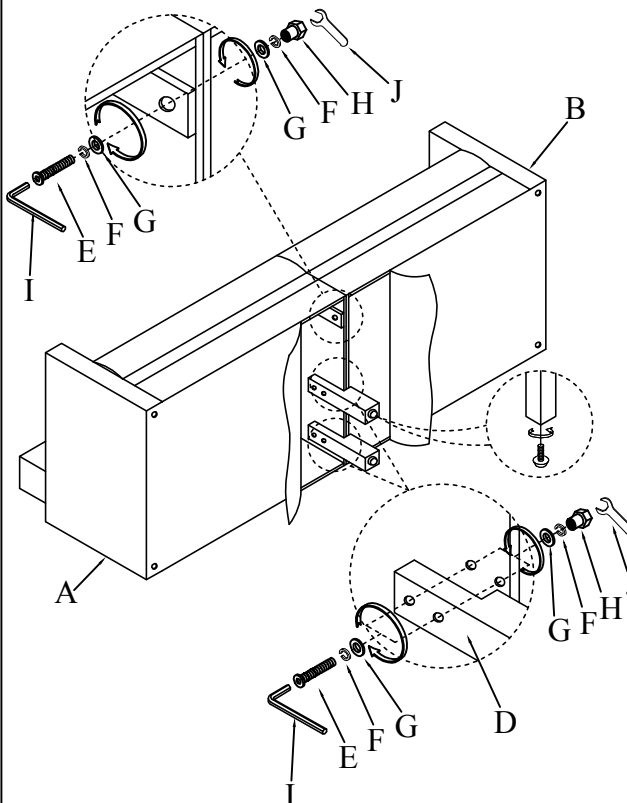

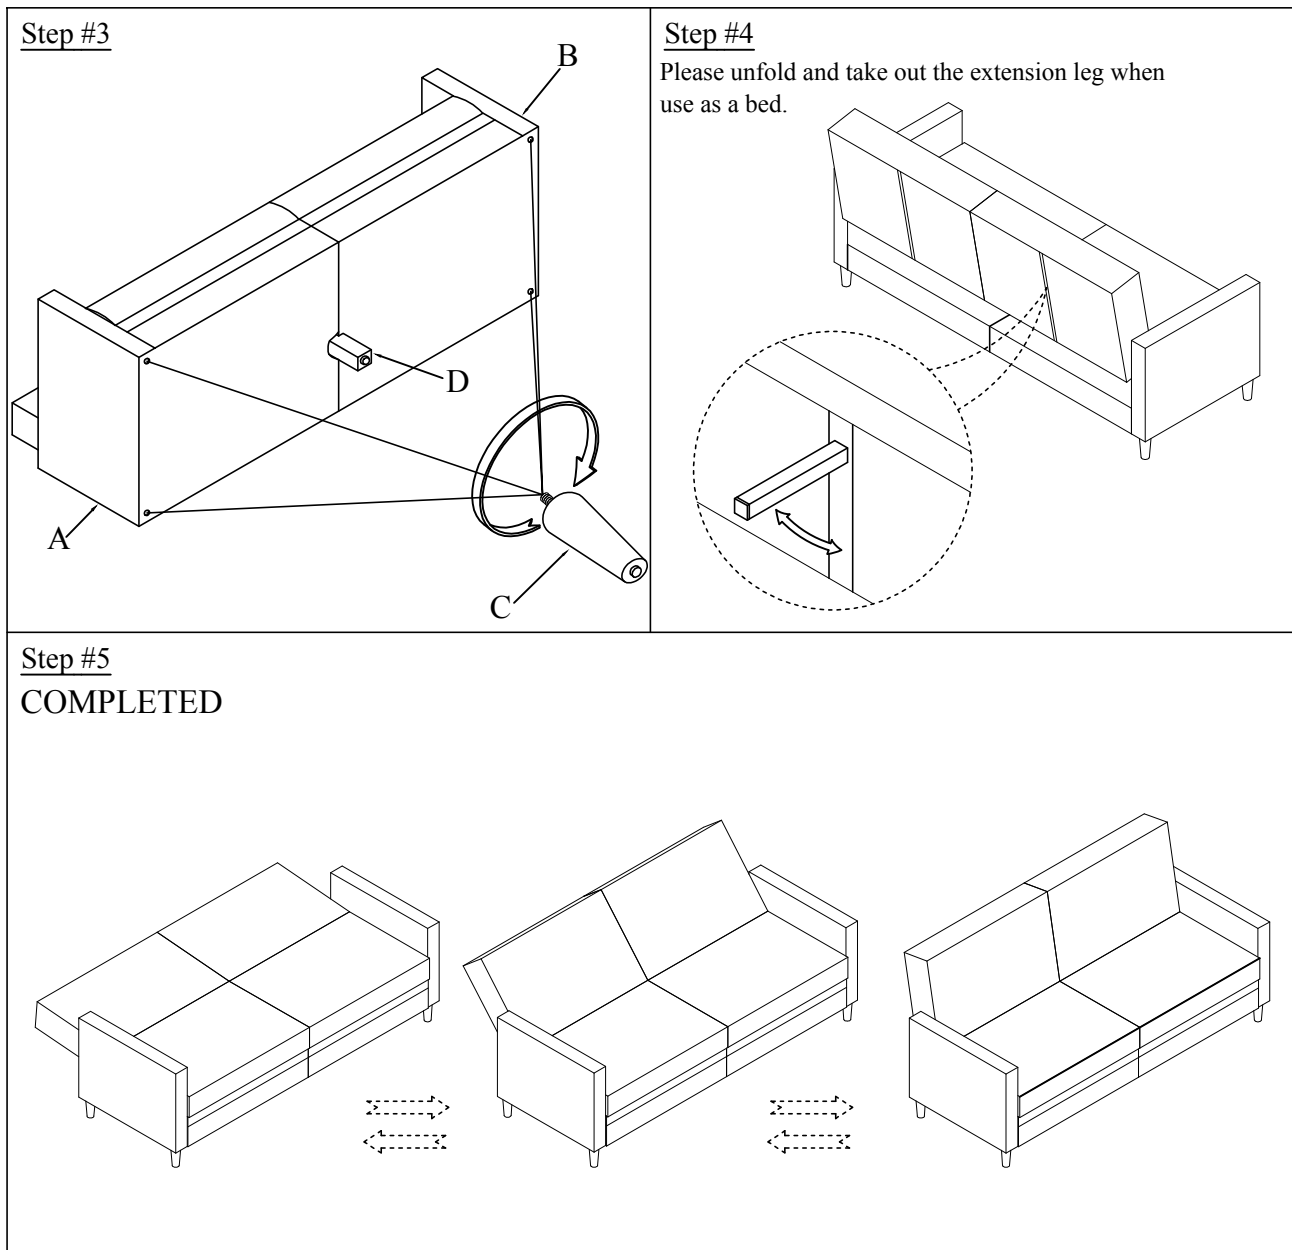

CARE INSTRUCTION FOR POLYESTER:

In order to maintain the original appearance of your polyester furniture, please follow below simple care procedure:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/ damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.



It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.



Il est recommandé de placer des coussins protecteurs sous tous les pieds et toutes les bases des meubles pour éviter d'endommager ou d'égratigner les planchers en bois ou autres surfaces dures, et pour limiter l'empreinte et empêcher la décoloration quand les meubles reposent sur la moquette.