

Assembly Instruction

ITEM NO.: 1068BR-1

ACCENT CHAIR




Legs & hardware are stored at the bottom of seat inside the dust cover as shown in drawing, please take out the legs and hardware for assembly.

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

Component list

No	Drawing	Qty	Description
А		1 PC	CHAIR
В		2 PC	FRONT LEG L&R
С		2 PC	REAR LEG L&R
D		4 PC	BOLT (M8×80mm) (FRONT LEG)
E	\odot	8 PC	WASHER
F		1 PC	ALLEN KEY
G		4 PC	BOLT (M8×65mm) (REAR LEG)

Step 1 Take out the Legs & hardware from the the bottom of seat inside the dust cover as shown in drawing.

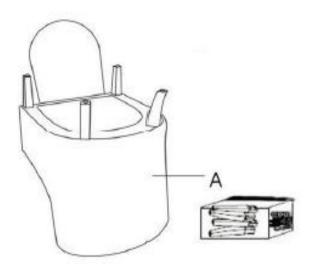


Step 2 Front Leg Assembly:


Align and insert front legs to the front seat frame pre-drilled holes, make sure both pre-drilled holes are in line, insert bolts D and washers then tighten with Allen Key.

Rear Leg Assembly:

Align and insert rear legs to the rear seat frame pre-drilled holes, rear legs curves must facing outward, make sure both pre-drilled holes are in line, insert bolts G and washers then tighten with Allen Key.

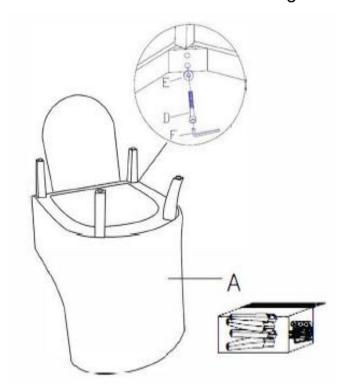

Step 3 Check all the bolts are tighten securely in position, put the dust cover back to the position. Upright the chair and make sure the chair is stable.

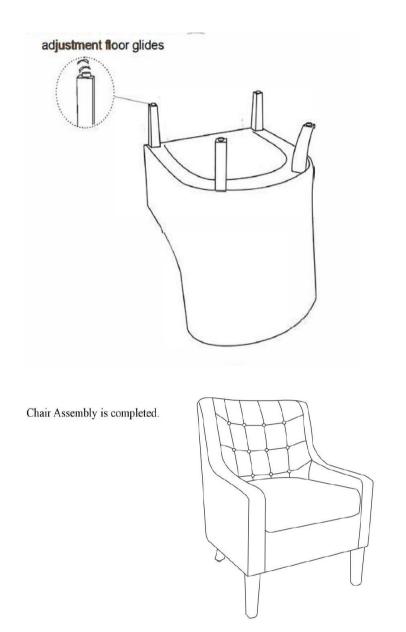

Care Instruction for Fabric Furniture:

In order to maintain the original appearance of your fabric furniture, please follow below simple care procedures:

- Avoid exposing forniture directly to sunlight or heating and air conditioning outlets.
 Sunlight and/or exposure to heating and air conditioning outlets will fade/damage fabric.
- Vacuum or wipe with a soft brush to remove dust.
- Clean fabric furniture with professional cleanser.



• For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.