

Assembly Instructions

ITEM NO: 9257-3

SOFA


Note: Back Cushion, Legs and Hardware are stored in the box, please take out for assembly.

PART	DRAWING	DESCRIPTION	QTY
Α		BACK REST	1 PC
В		BACK CUSHION	3 PCS
С		LSF ARM	1 PC
D		RSF ARM	1 PC
E		SEAT	1 PC
F		SEAT CUSHION	3 PCS
G		FRONT LEG	2 PCS
Н		REAR LEG	2 PCS
I		SUPPORT LEG	2 PCS

PART	DRAWING	DESCRIPTION	QTY
1		BOLT Ø5/16"-23 x 1-1/2"L	8 PCS
2		BOLT Ø5/16"-50 x 2-1/8"L	2 PCS
3	0	SPRING WASHER (Ø5/16")	10 PCS
4	0	FLAT WASHER (Ø5/16")	10 PCS
5		ALLEN KEY (M4)	1 PC


В



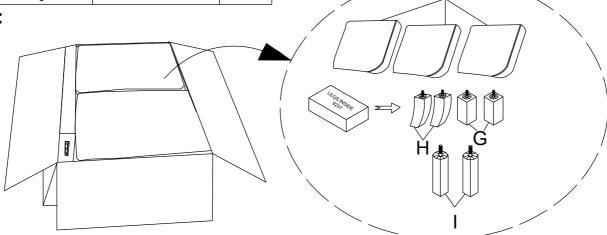


MADE IN VIETNAM

Page: 1/5

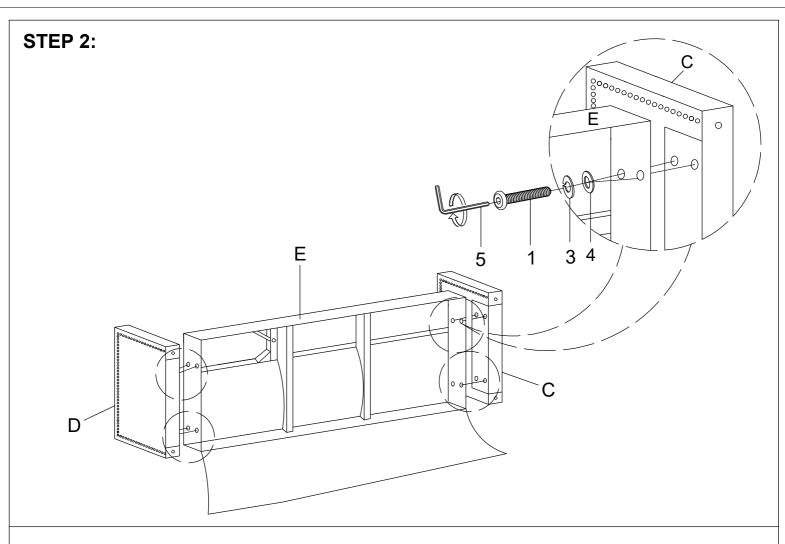


STEP 3:

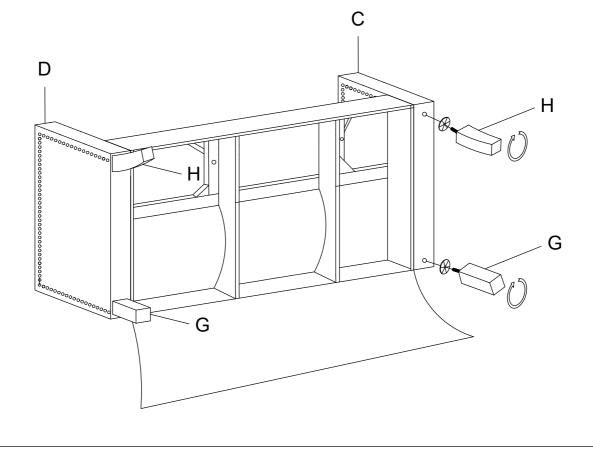

MADE IN VIETNAM

Page: 2/5


STEP 4:

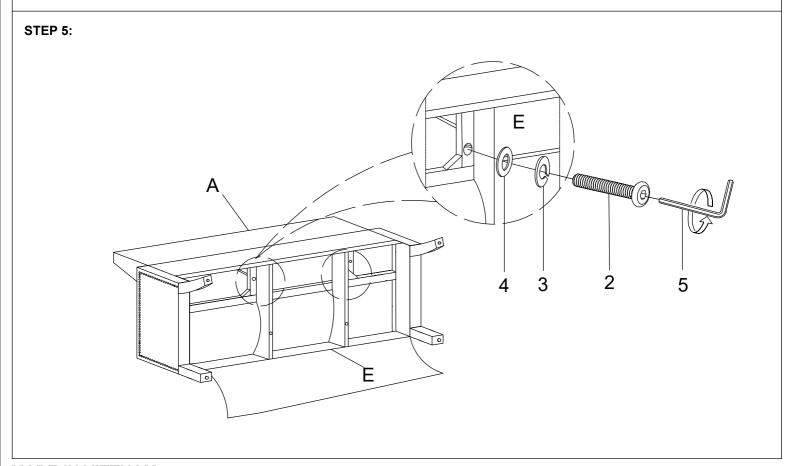

MADE IN VIETNAM Page: 3/5


STEP 6:

Ε

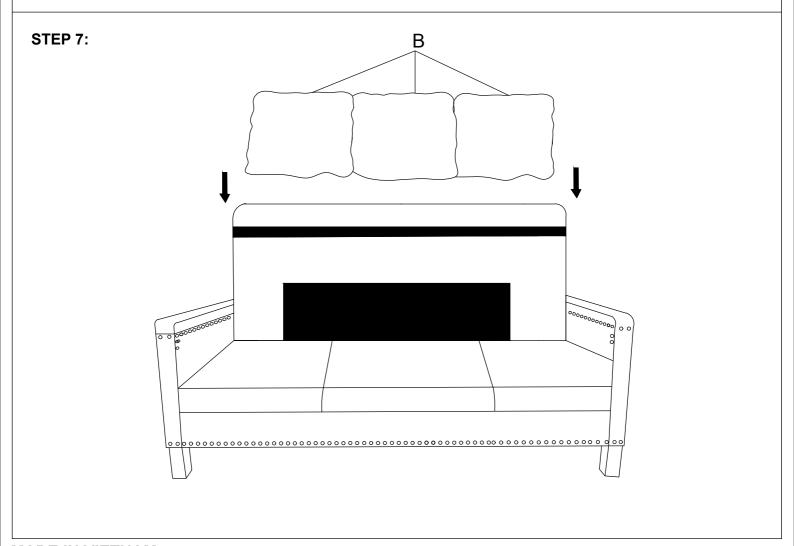

MADE IN VIETNAM Page: 4/5

COMPLETED

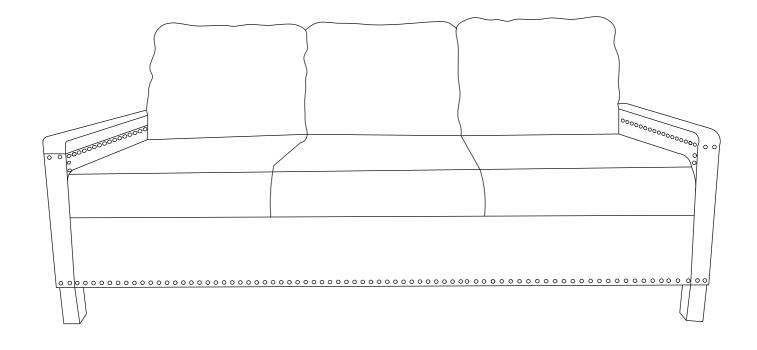

Care Instruction for Chenille Furniture:

In order to maintain the original appearance of your Chenille Furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Chenille.
- Vacuum or wipe with a soft cloth to remove dust.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.

MADE IN VIETNAM Page: 5/5