


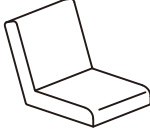




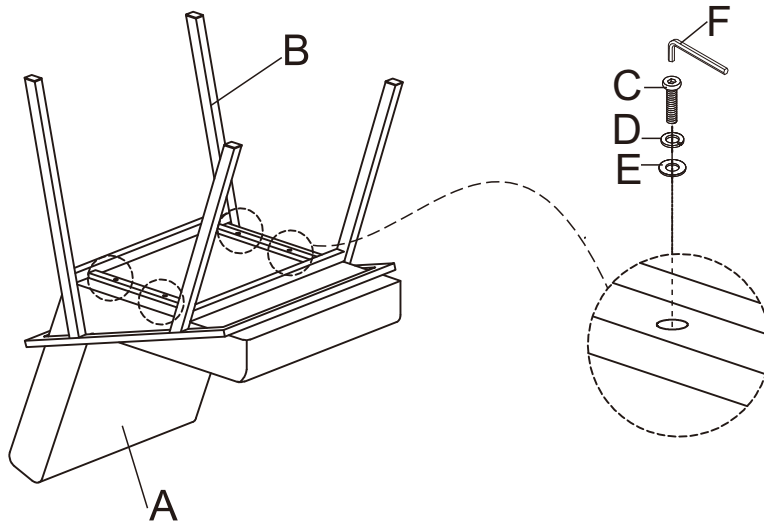


HOME ELEGANCE


ASSEMBLY INSTRUCTION

ITEM NO: 5939S SIDE CHAIR

NO	PARTS LIST		QTY	NO	HARDWARE LIST (PACKED IN 5939S)		QTY
A		SEAT CUSHION	1	C		ALLEN BOLT 1/4" x 30mm	4
				D		SPRING WASHER 1/4 x 10mm x 2mm	4
B		LEG FRAME	1	E		FLAT WASHER 1/4 x 16mm x 2mm	4
				F		ALLEN KEY	1



STEP 1

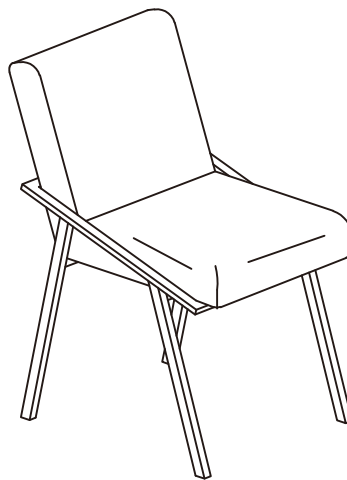

COMPLETED

! It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.
DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.
HARDWARE MAY LOOSEN OVER TIME. PERIODICALLY CHECK TO MAKE SURE ALL CONNECTIONS ARE TIGHT.
RE-TIGHTEN IF NECESSARY.